English

- Mounting a lens (sold separately)
- 2 Connect your computer to the projector.

Connect the supplied power cord to the projector.

To prevent the power cord from accidently removing from the AC IN of the projector, use the power cord stopper.

- **3** Remove the lens cap.
- Press the (b) (POWER) button on the projector cabinet or the POWER ON button on the remote

The POWER indicator lit in green will start to blink in blue. After that, the image will be projected onto the screen.

- **6** Selecting a Source
- **6** Adjusting the Picture Size and Position

Adjustment procedures are differed on lens unit. Refer to the User's manual about detailed adjustment for each lens unit.

[LENS SHIFT]

- 1. Press either SHIFT/HOME POSITION button on the cabinet or LENS SHIFT button on the remote
- 2. Press the ▼▲◀▶ buttons to move the projected image.

For manual lens unit

[FOCUS]

1. Use the focus ring to obtain the best focus.

[ZOOM]

1. Turn the zoom ring clockwise and counterclockwise.

For motorized lens units

[FOCUS]

- 1. Press the FOCUS button on the cabinet.
- 2. When the cursor is on the CENTER on on-screen menu, press either ◀ or ▶ button to align focus around the optical axis.
- 3. Press ♥ button to select the PERIPHERY on the on-screen menu, and then press either ◀ or ▶ button to align the focus of screen peripheral area.

[ZOOM]

- 1. Press ZOOM/L-CALIB. button.
 - ◀ or ▶ buttons on the cabinet or the remote control are available to adjust ZOOM while the ZOOM adjustment screen is displayed on.

[TILT FOOT]

1. Turn the left and right tilt foot to adjust.

Turning off the Projector

- 1. First, press the (b) (POWER) button on the projector cabinet or the STANDBY button on the remote
- 2. Secondly, press the ENTER button or press the (b) (POWER) or the STANDBY button again.

6700 Series QuickSetup Guid DUKANE

