# **DVP510 Quick Start Guide**




## **M** Important


- \* Please activate your warranty at <a href="www.dukaneav.com">www.dukaneav.com</a>
- \* Please visit our website <a href="www.dukaneav.com">www.dukaneav.com</a> to download latest version of Software, Multilingual User Manual and Quick Start Guide.

### **User Condition**

\* For the installation instruction, please refer to the 2. Installation & Connectoin on the rear side.

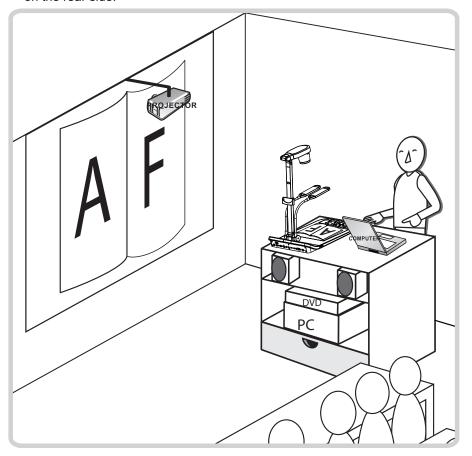


### 1. Getting Started

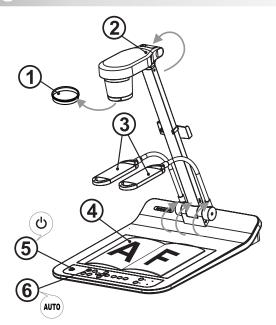


- 1) Remove the lens cap.
- 2 Pull up the camera and the camera arm. The camera should aim at the center of the presenter.
- (3) Pull up the lamp arm and adjust it to appropriate position.
- (4) Place an object to be displayed under the camera.
- 5 Turn the power on.
- 6 Press the [ AUTO TUNE ] AUTO button to optimize the image. You are ready to teach / present.
  - \* You can adjust the camera head slightly to point at the center of the capture area, when at the end of the movement range.



### **▼** Connect to a Projector or Monitor

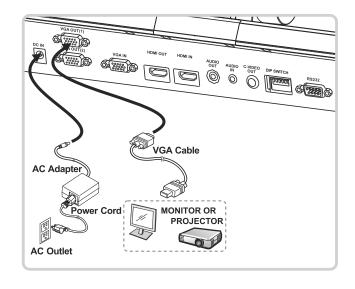


▼ Connect to a Computer and Use Dukanes' Software or Connect to an Interactive Whiteboard (IWB).

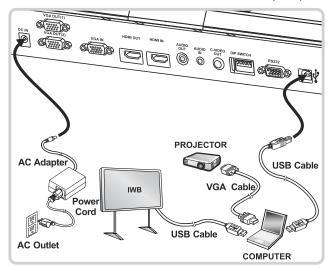


\* Driver and software can be downloaded from Dukanes website.


# **▼** Connect a Projector, Computer and Monitor simultaneously

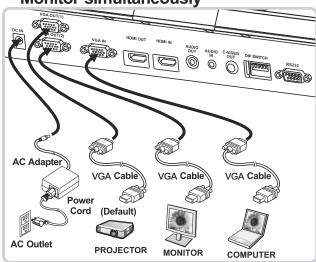

#### **▼** Connect to a TV

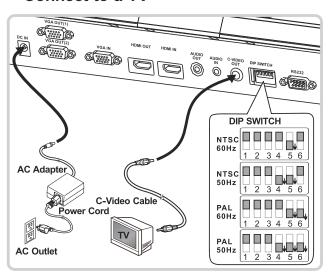

### **▼** Connect to an HDTV

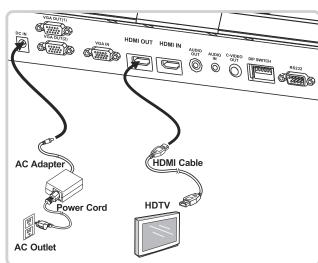

- \* NTSC: USA, CANADA, MEXICO, PANAMA, CHILE, JAPAN, TAIWAN, KOREA AND PHILIPPINES.
- \* PAL: Country / region not listed above.
- \* Please confirm the local voltage and frequency, for example the default 60Hz applicable in the US, Taiwan

#### \* After the unit is re-started, new DIP switch configuration is effective. Once C-Video is on, VGA is not supported.

### **▼** Connect to a Computer or DVD

