Projector Models
6640W 6645 6645W 6650
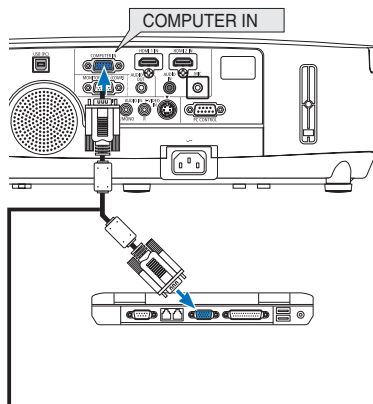
DUKANE

Quick Setup Guide

Step 1

Connect your computer to the projector.
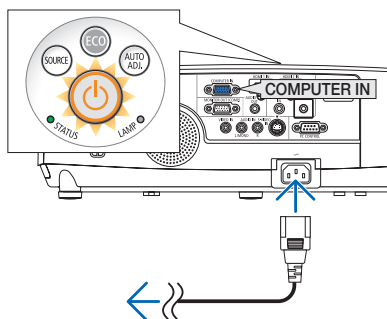
COMPUTER IN

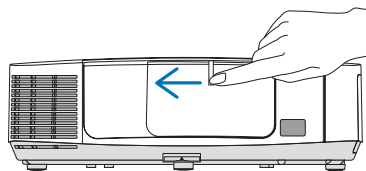*Supplied computer cable (VGA)*

Step 2
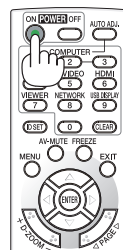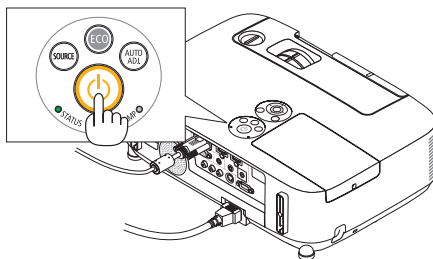
Connect the supplied power cord.
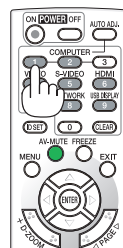
COMPUTER IN

Step 3
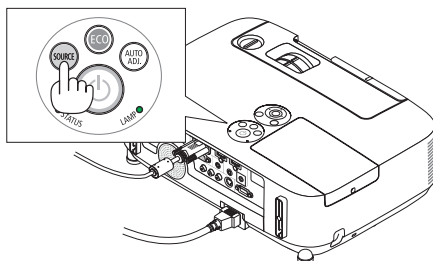
Slide the lens cover to the left to uncover the lens.
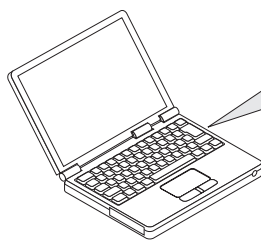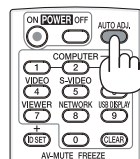

Step 4

Turn on the projector.

Step 5

Select a source.

Fn + F1 − F12
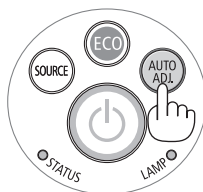
Ventilation (outlet)

Adjust the picture size and position.

Adjustable Tilt Foot Lever

Adjustable Tilt Foot

Adjust the tilt foot

Rear foot
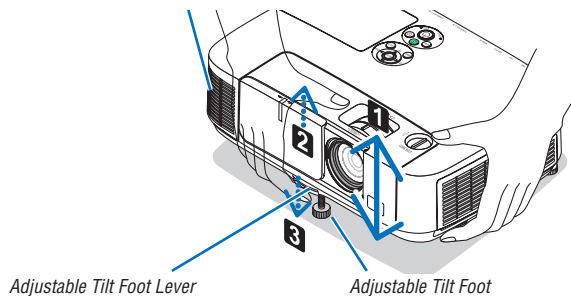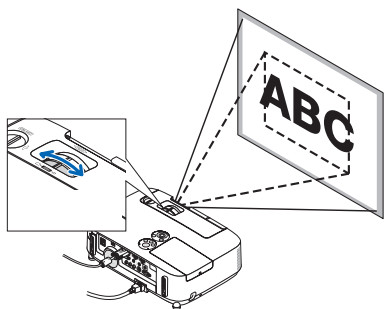
Up   Down
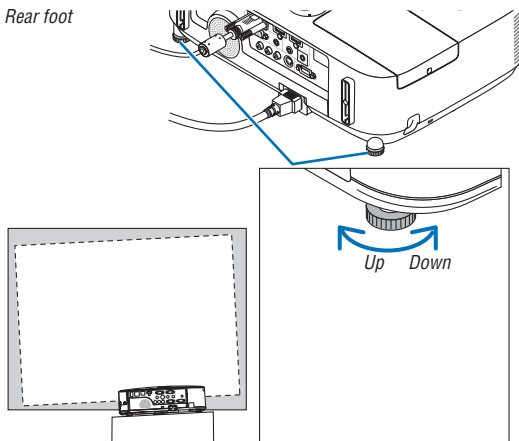
Rotate the lens shift dial (Lens shift)
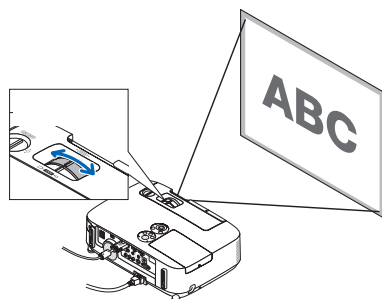
Downward

Upward

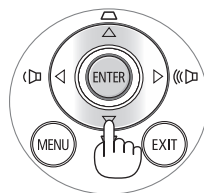**ABC**
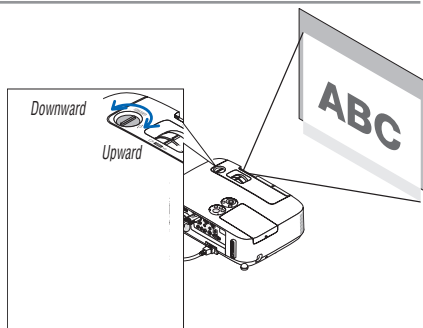
Zoom

(→ page 22 of the User's Manual)

Focus
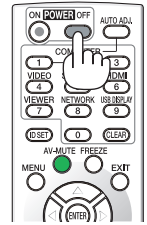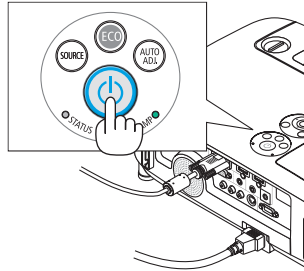

(→ page 21 of the User's Manual)

Automatic Keystone Correction function is turned on at the time of shipment.
You can also use the ▲ or ▼ button to perform Keystone correction manually with no menu displayed.

KEYSTONE

ENTER:EXIT   EXIT:EXIT   ⇕:ADJUST   ⬌:ADJUST

(→ page 24 of the User's Manual)

1. Press the POWER OFF button twice.
   The lamp will go off. The POWER indicator will change color to orange and the STATUS indicator will light green. This indicates the projector is in the standby mode.
2. Slide the lens cover to the right to cover the lens.
3. Disconnect all the cables.

(→ page 27 of the User's Manual)